



Enzo WET is equipped with a 600W LED source developing a maximum flux of 28,750 lumens. Enzo WET offers all the tools needed to give free rein to designers' creativity, including: 5.5° to 45° zoom, CMY color mixing, progressive CTO filter, 7-color wheel, 7 rotating gobos, 8 fixed gobos, animation wheel, a 3-facet circular prism, a 6-facet linear prism, iris. One heavy frost, one medium frost, both progressive, and Full curtain framing shutters. Enzo WET packs all these features into a compact case weighing just 35.5 kg. Enzo WET will be the perfect ally for any show or fixed installation where powerful, compact spotlights are essential. It supports DMX, RDM, Art-Net, and sACN protocols, and includes a Wireless DMX Solution® transceiver, ensuring a simplified and efficient setup.

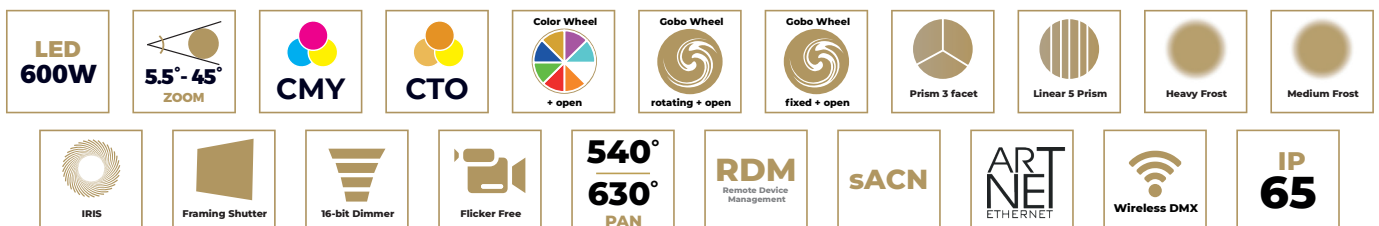


Table of Contents

Specifications	3
Colors & Filters.....	4
Photometric Data Narrow Zoom.....	5
Photometric Data Medium Zoom	6
Photometric Data Wide Zoom.....	7
White Spectrum Test Report	8
High CRI Filter Spectrum Test Report.....	10
Eighth CTB Filter Spectrum Test Report.....	12
CTO @100% Spectrum Test Report	14
CTO @100% + High CRI Filter Spectrum Test Report	16
Cyan @100% Spectrum Test Report.....	18
Magenta @100% Spectrum Test Report	19
Yellow @100% Spectrum Test Report	20
Cyan + Magenta @100% Spectrum Test Report	21
Magenta + Yellow @100% Spectrum Test Report	22
Cyan + Yellow @100% Spectrum Test Report.....	23
Plasa Red (Lee #029) Filter Spectrum Test Report	24
Tokyo Blue (Lee #071) Filter Spectrum Test Report.....	25
Twickenham Green (Lee #736) Filter Spectrum Test Report	26
Deep Amber (Lee #104) Filter Spectrum Test Report.....	27
AS Golden Amber (Lee #780) Filter Spectrum Test Report.....	28

Source

Engine	White CW
LED Watts	600W
Engine CCT	7400K
Engine Life (L70)	> 20000 H
Refresh Rate	900 Hz to 25 KHz
Dimming	Electronic - 16 bits
Dimming Curves	Linear, Square, Inv Square, S-curve
Dimming Modes	Dim0 (0s), Dim1 (0.25s), Dim2 (0.5s), Dim3 (0.75s), Dim4 (1s)
Strobe Speed	1 - 20 Hz
Strobe Modes	Standard, Pulse, Random

Performances

Fixture Luminous Flux (Max)	13111 lm
Fixture Illuminance	Narrow: 58000 lux@5m 5.5° Medium: 16500 lux@5m 16° Wide: 2800 lux@5m 45°
Fixture CCT Output	7039 K
CRI	Native: 72.34 With High CRI filter: 90.41
Tm30	Native: 72.06 With High CRI filter: 87.88
TLCI	Native: 48.04 With High CRI filter: 77.5
CQS	Native: 70.44 With High CRI filter: 90.08


Optical

Lens Diameter	115mm
Zoom Range	5.5° - 45°
Zoom Ratio	8.2 :1


Colour System

Colour System	Variable CYM, Variable CTO, 5 Colour Wheel + 2 Filters
Control	8 bits / 16 bits


Colors & Filters

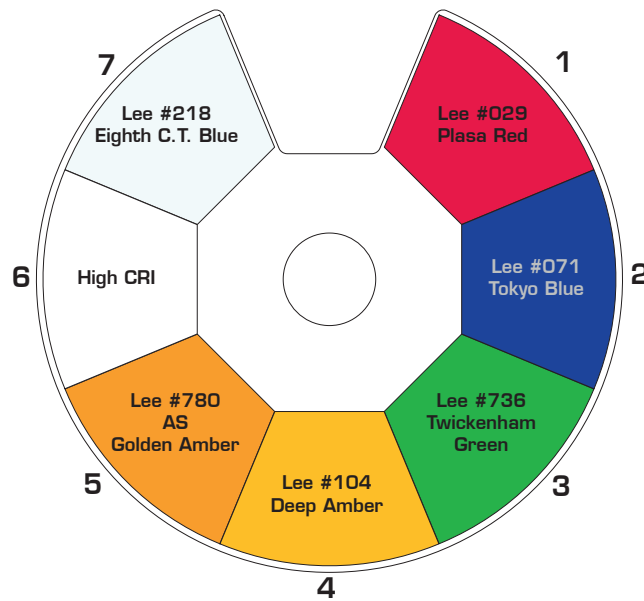


Magenta

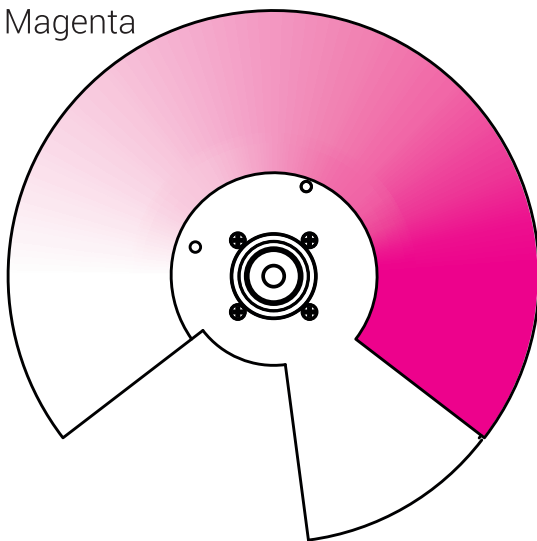


Cyan

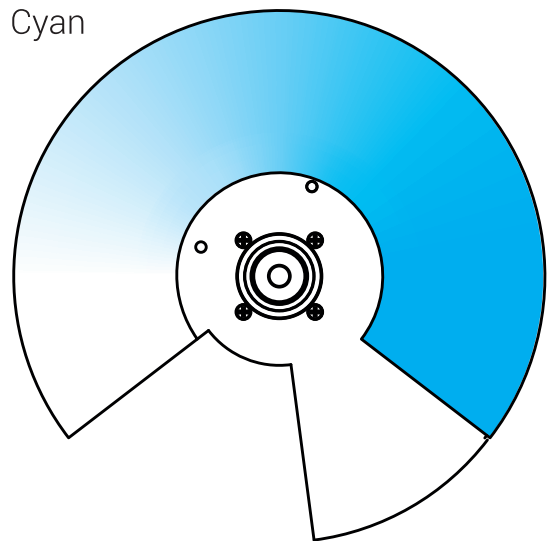



Yellow

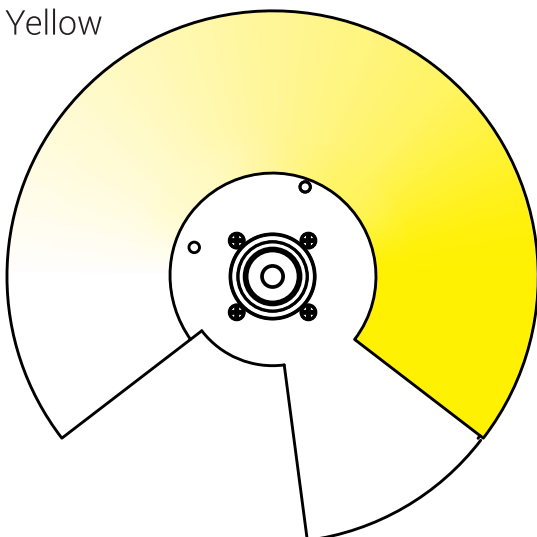



CTO

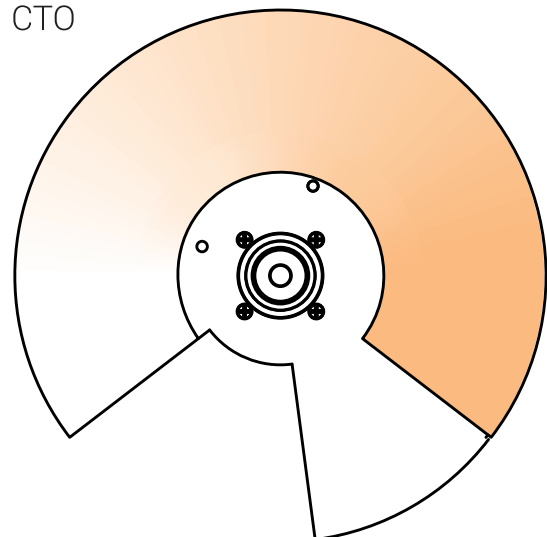



Photometric Data - Narrow Zoom

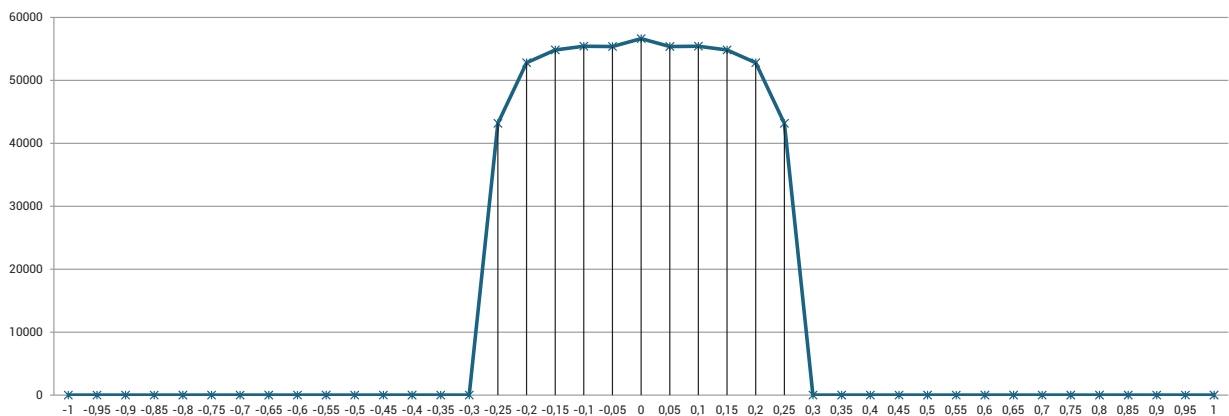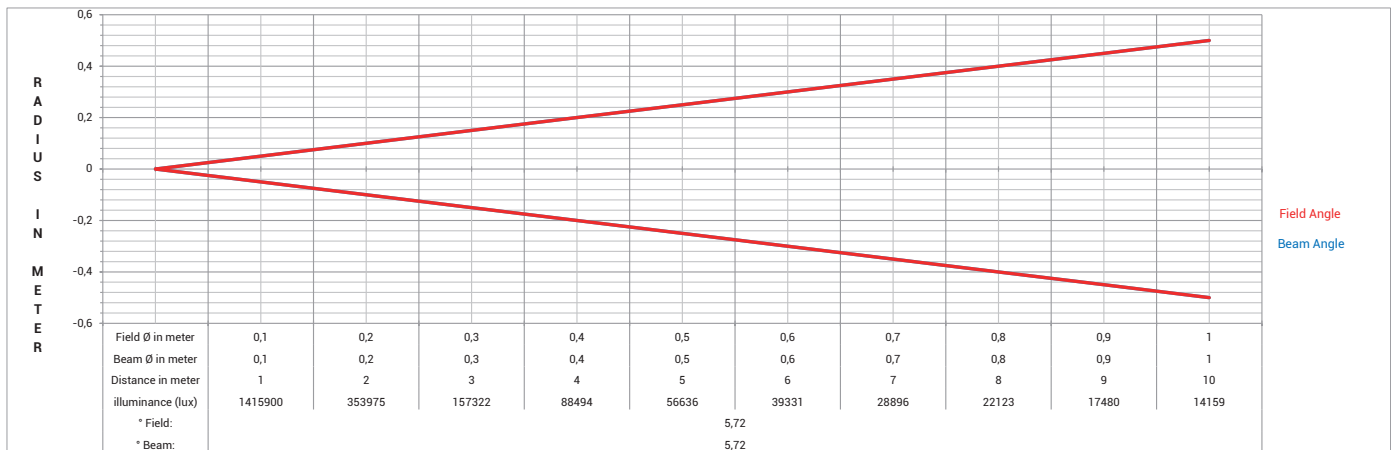

Photometric Data - Medium Zoom

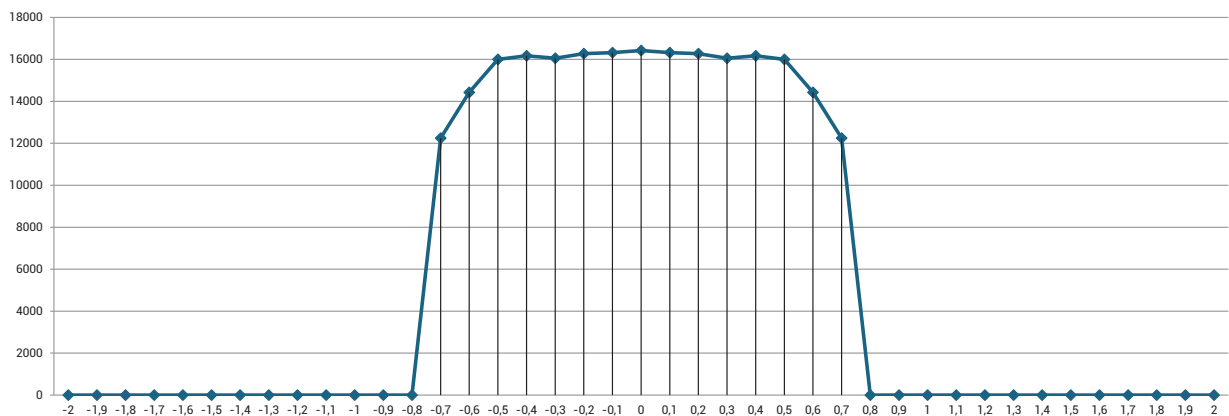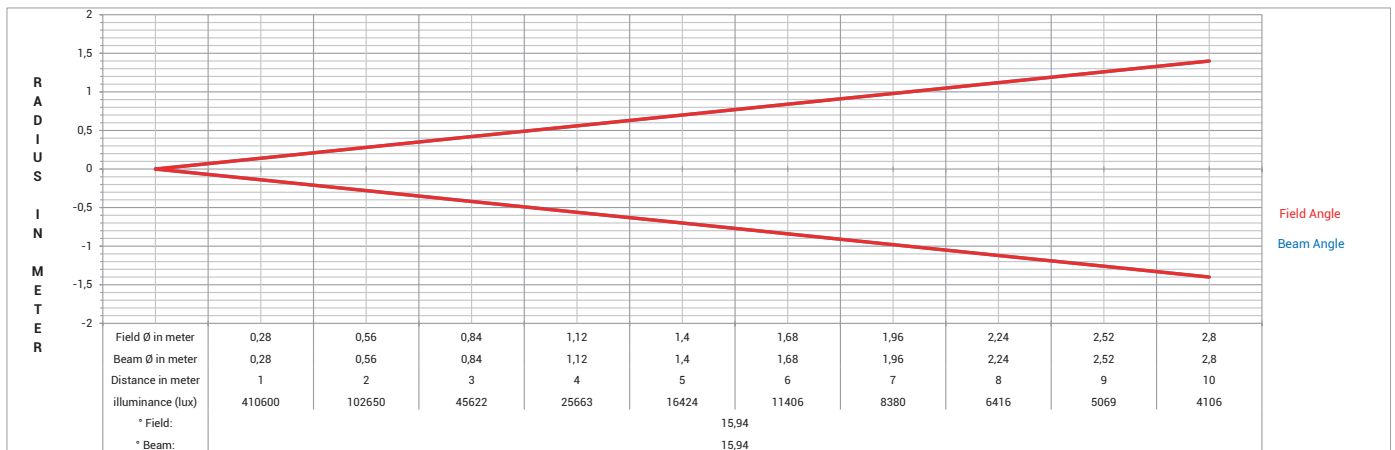

Photometric Data - Wide Zoom

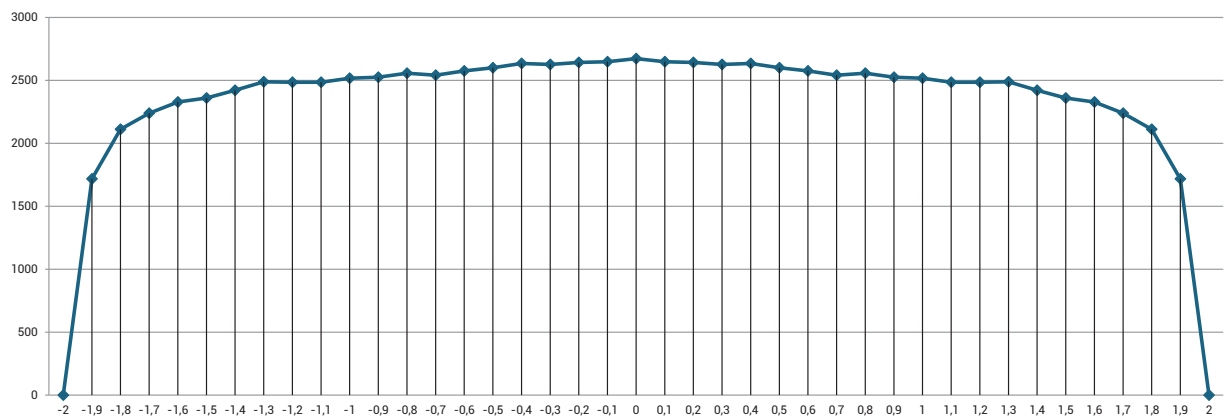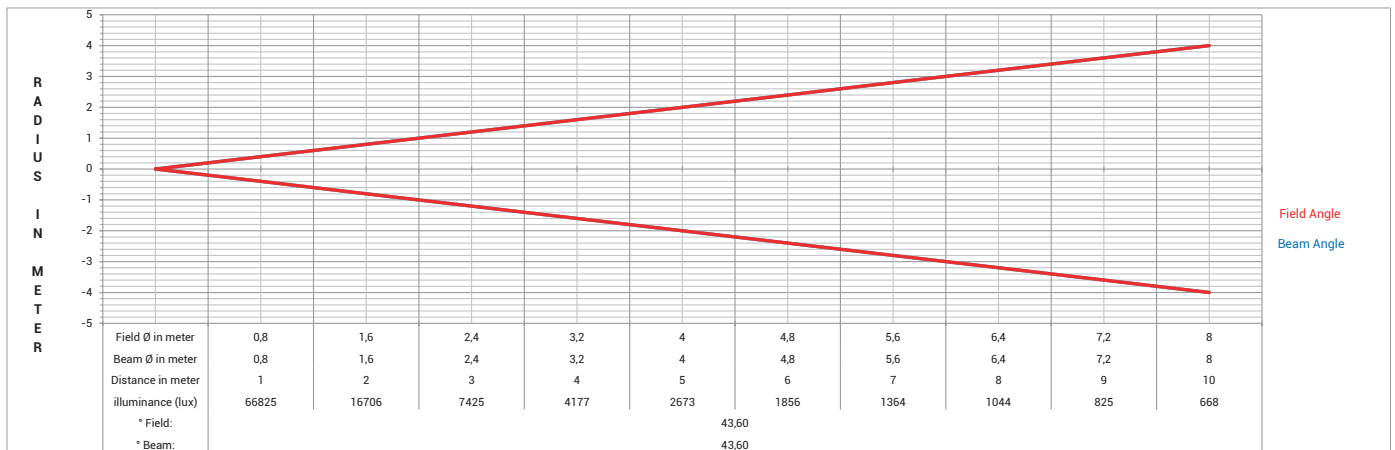

White Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:45:32
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Source	



BASIC

CRI	: 72,3
x	: 0,3057
y	: 0,3167
CCT	: 7039
LUX	: 15398



Spectrum

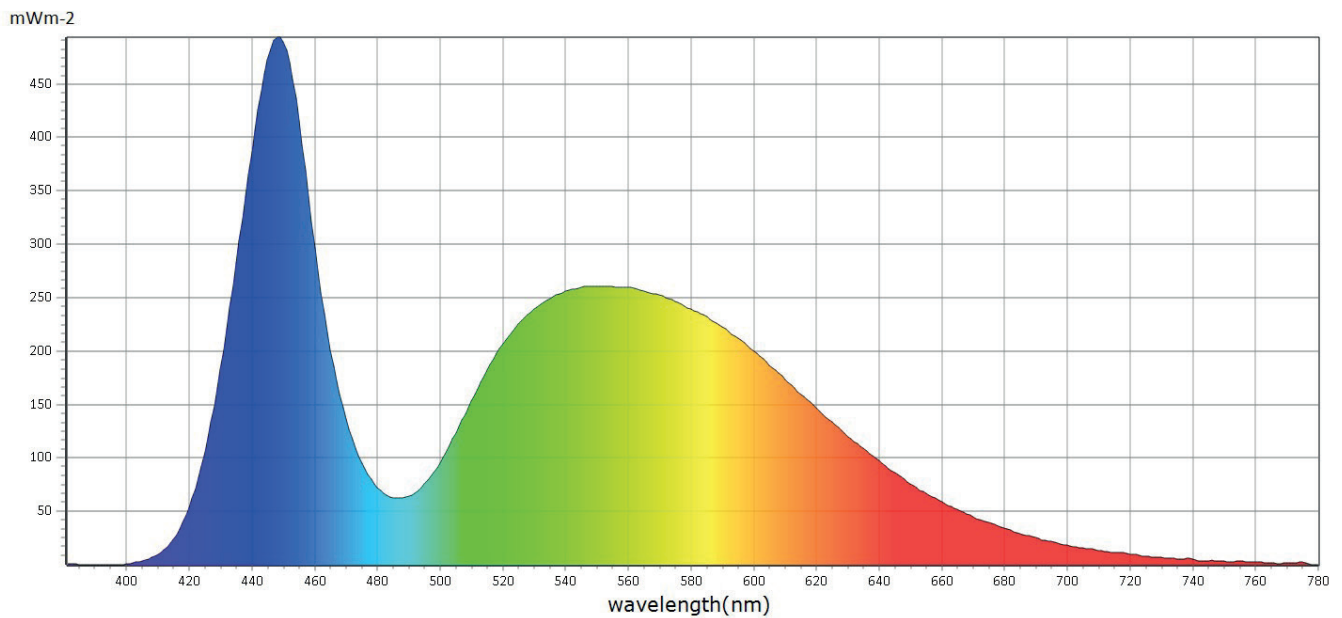

CIE1931

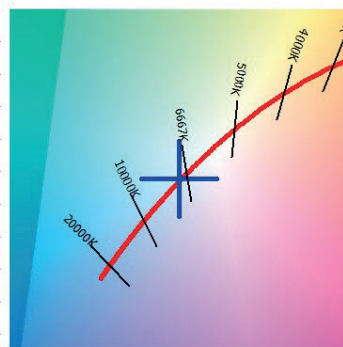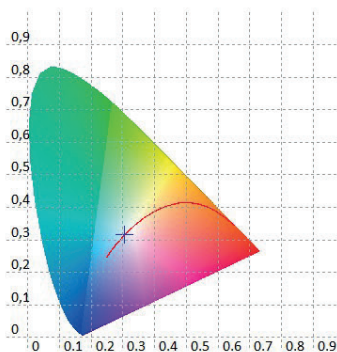

CIE1976

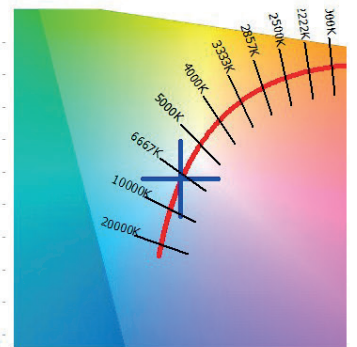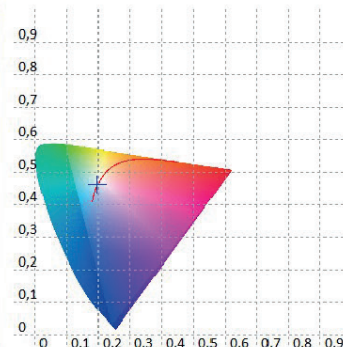

White Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:45:32
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Source	


BASIC

CRI	: 72,3
X	: 0,3057
Y	: 0,3167
CCT	: 7039
LUX	: 15398


CRI: 72,34

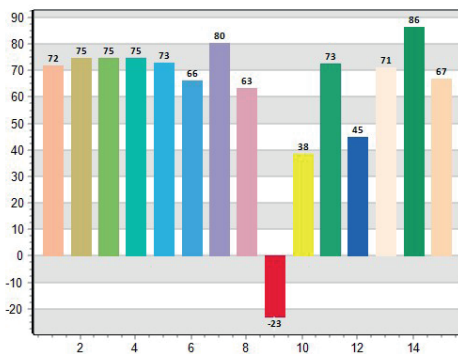


CQS: 70,44

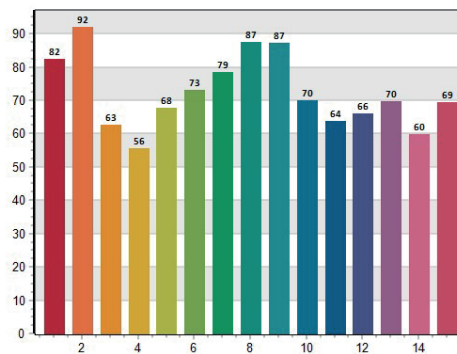


CRI-2

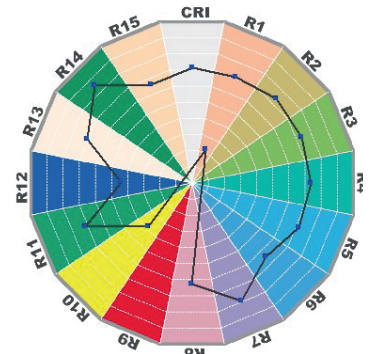

TM30: 72,06

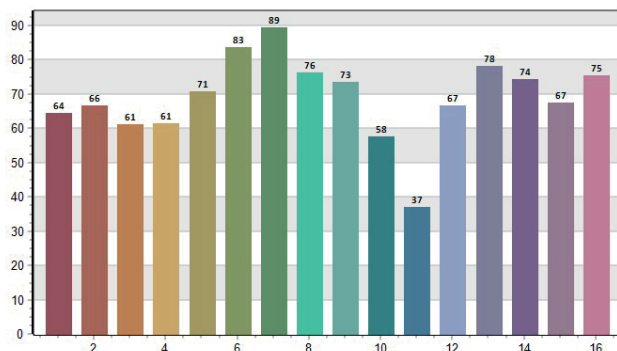

TLCI: 48,04

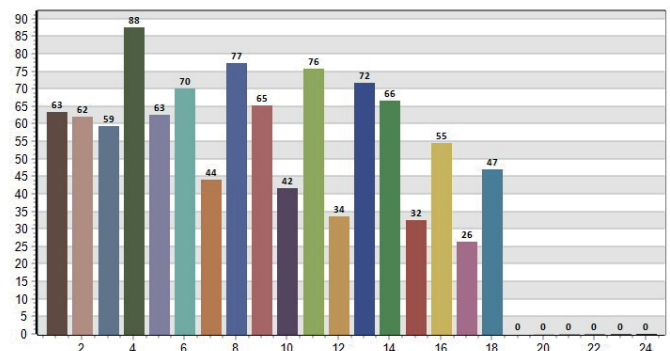

CRI values, only R1-R8 are used to calculate final CRI

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
71,8	74,8	74,6	74,6	73,0	66,1	80,4	63,4	-22,9	38,5	72,5	44,9	71,2	86,4	66,7

TM30 C values, 16 binned values out of total of 99 C values

C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	C14	C15	C16
64,3	66,5	61,1	61,4	70,7	83,5	89,3	76,1	73,3	57,6	37,0	66,6	78,1	74,3	67,4	75,4

CQS Q values

Q1	Q2	Q3	Q4	Q5	Q6	Q7	Q8	Q9	Q10	Q11	Q12	Q13	Q14	Q15
82,4	92,0	62,7	55,5	67,7	73,2	78,6	87,4	87,3	70,1	63,9	66,0	69,8	59,7	69,5

High CRI Filter Spectrum Test Report

Slot #6

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:57:47
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
C6	


BASIC

CRI	: 90,4
x	: 0,3130
y	: 0,3067
CCT	: 6688
LUX	: 10147


Spectrum

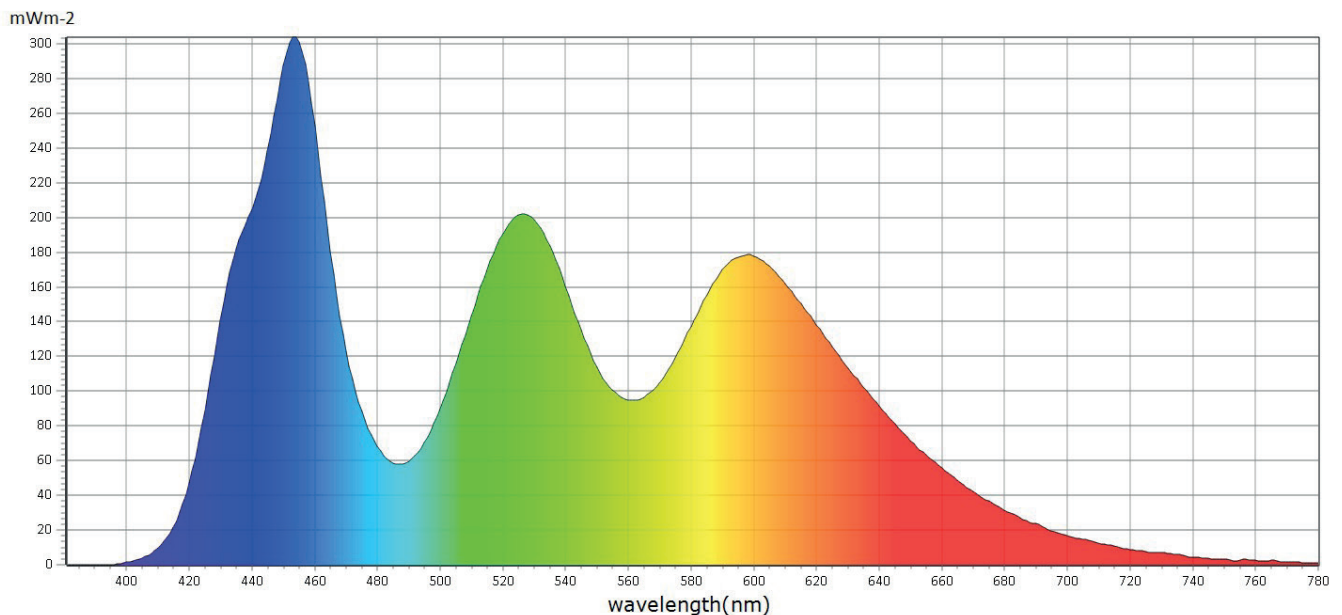

CIE1931

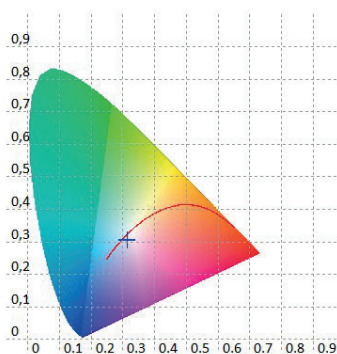

CIE1976

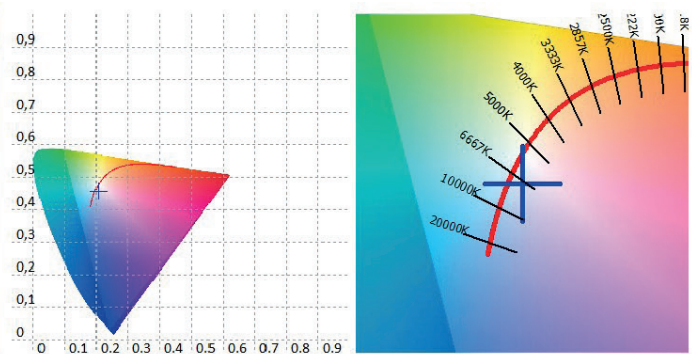

High CRI Filter Spectrum Test Report

Slot #6

Medium Zoom @ 5m

Information

User : Measure Time :15:57:47

Model NO. : MK350S PREMIUM Light Source :

Memo :
C6

BASIC

CRI : 90,4


X : 0,3130

Y : 0,3067


CCT : 6688

LUX : 10147


CRI: 90,41

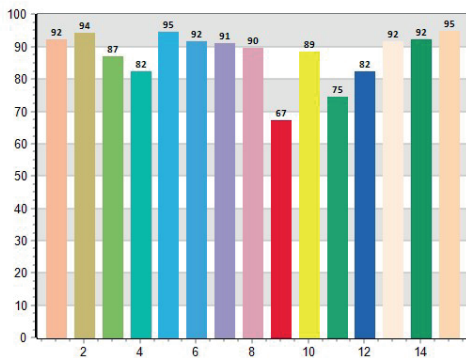


CQS: 90,08

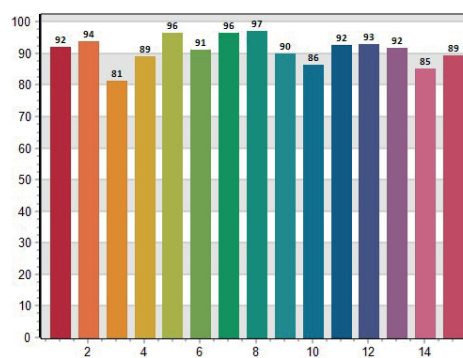


CRI-2

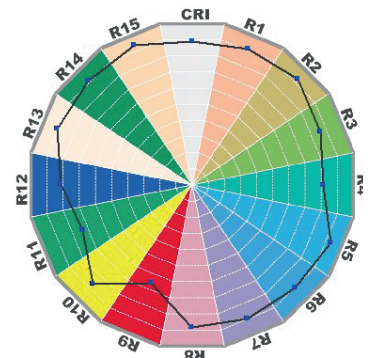

TM30: 87,98

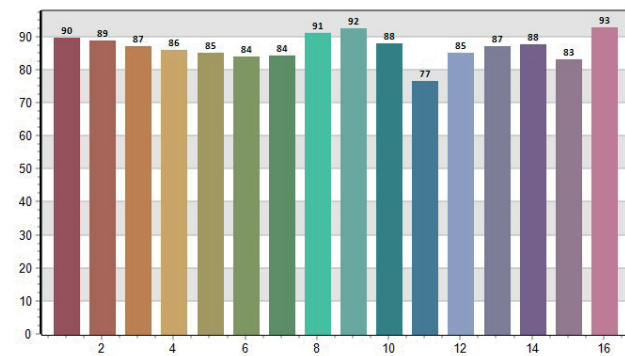

TLCI: 77,50

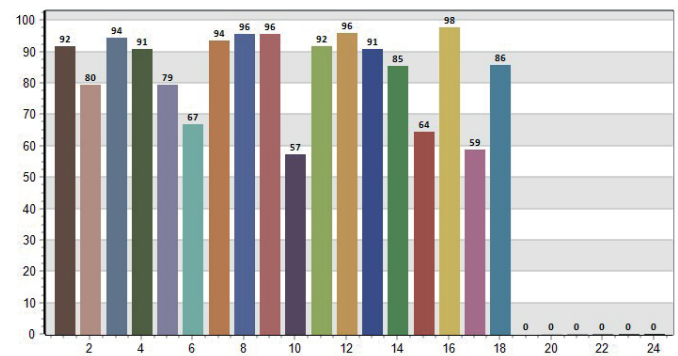

CRI values, only R1-R8 are used to calculate final CRI

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
92,4	94,3	87,2	82,3	94,5	91,8	91,0	89,8	67,1	88,6	74,5	82,3	91,7	92,3	94,9

TM30 C values, 16 binned values out of total of 99 C values

C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	C14	C15	C16
89,6	88,8	86,9	86,0	84,9	83,8	84,3	91,0	92,4	87,9	76,5	85,2	87,1	87,6	83,1	92,8

CQS Q values

Q1	Q2	Q3	Q4	Q5	Q6	Q7	Q8	Q9	Q10	Q11	Q12	Q13	Q14	Q15
92,0	93,9	81,3	89,1	96,4	91,1	96,5	97,1	90,0	86,5	92,5	92,8	91,8	85,3	89,3

Eighth CTB (Lee #218) Filter Spectrum Test Report

Slot #7

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:57:58
Model NO. : MK350S PREMIUM	Light Source :
Memo : C7	



BASIC

CRI	: 72,3
x	: 0,2863
y	: 0,2968
CCT	: 9016
LUX	: 10220



Spectrum

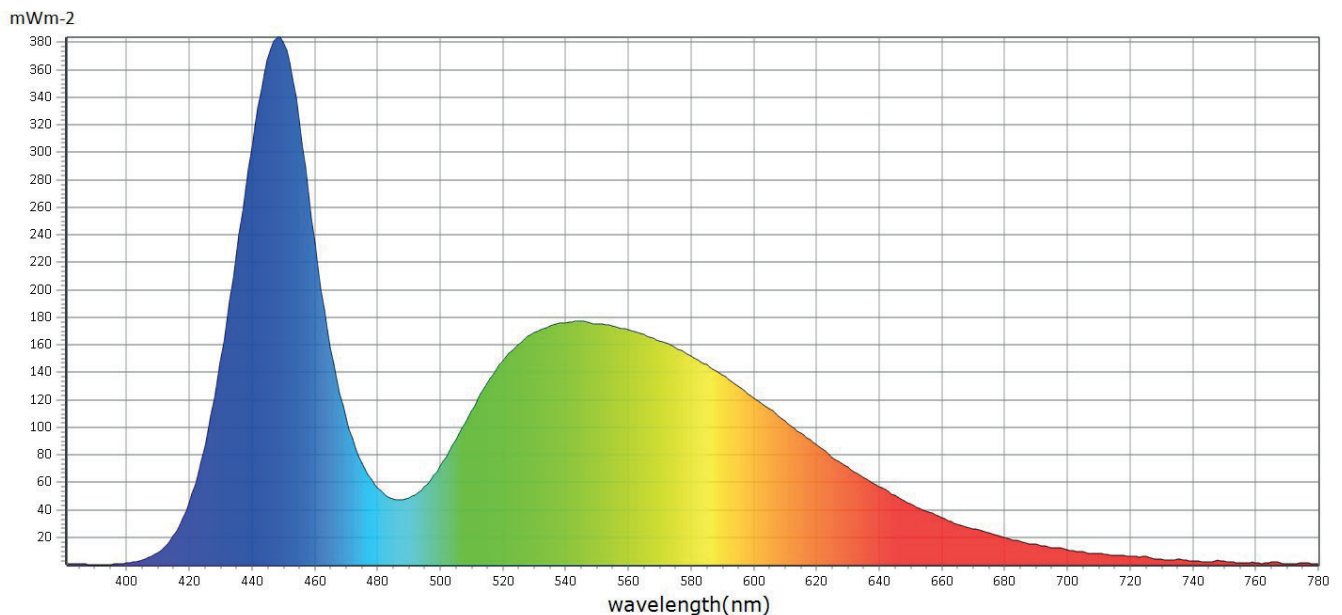

CIE1931

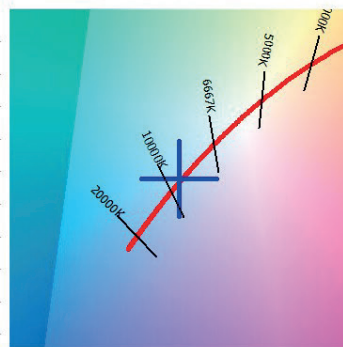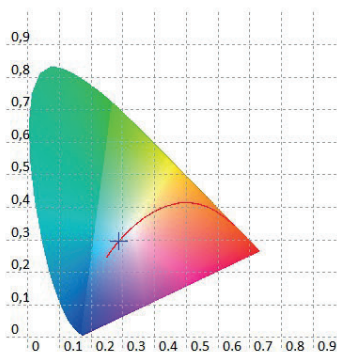

CIE1976

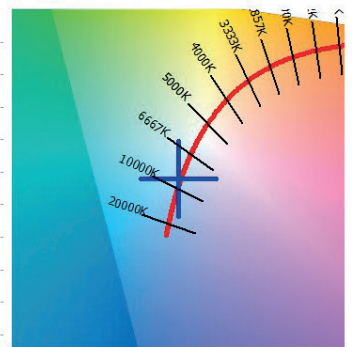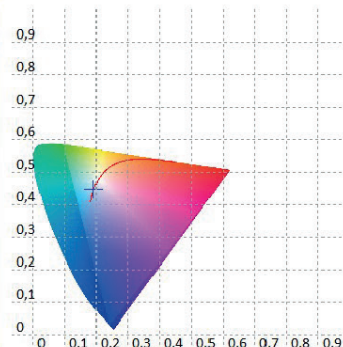

Eighth CTB (Lee #218) Filter Spectrum Test Report

Slot #7

Medium Zoom @ 5m




Information

User : Measure Time :15:57:58
 Model NO. : MK350S PREMIUM Light Source :
 Memo :
 C7


BASIC

CRI : 72,3
 X : 0,2863
 Y : 0,2968
 CCT : 9016
 LUX : 10220


CRI: 72,27

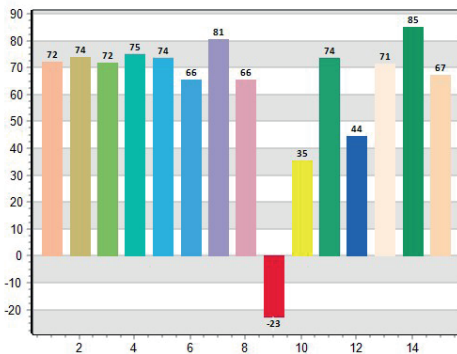


CQS: 70,61

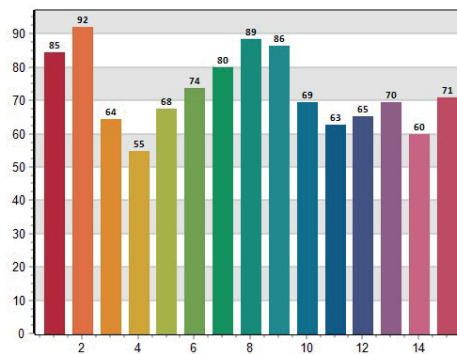


CRI-2

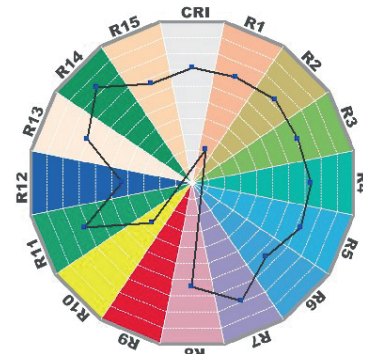

TM30: 71,71

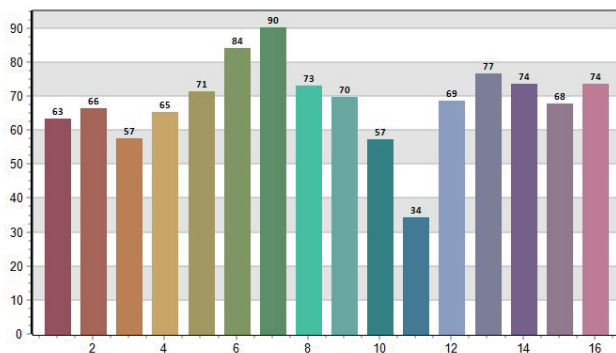

TLCI: 48,83

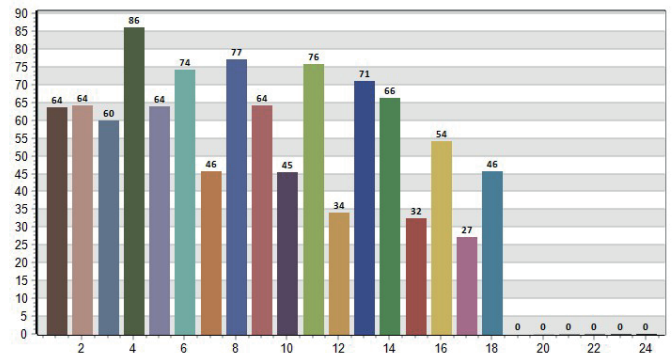

CRI values, only R1-R8 are used to calculate final CRI

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
72,1	73,8	71,9	74,9	73,7	65,6	80,5	65,7	-22,6	35,4	73,6	44,4	71,3	85,1	67,4

TM30 C values, 16 binned values out of total of 99 C values

C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	C14	C15	C16
63,3	66,3	57,4	65,4	71,3	84,0	90,2	72,9	69,8	57,4	34,3	68,6	76,7	73,5	67,7	73,5

CQS Q values

Q1	Q2	Q3	Q4	Q5	Q6	Q7	Q8	Q9	Q10	Q11	Q12	Q13	Q14	Q15
84,5	92,1	64,4	54,8	67,6	73,9	80,0	88,6	86,5	69,4	62,8	65,3	69,6	60,0	71,0

CTO @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:54:07
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
CTO	



BASIC

CRI	: 67,3
x	: 0,4600
y	: 0,4254
CCT	: 2810
LUX	: 4146



Spectrum

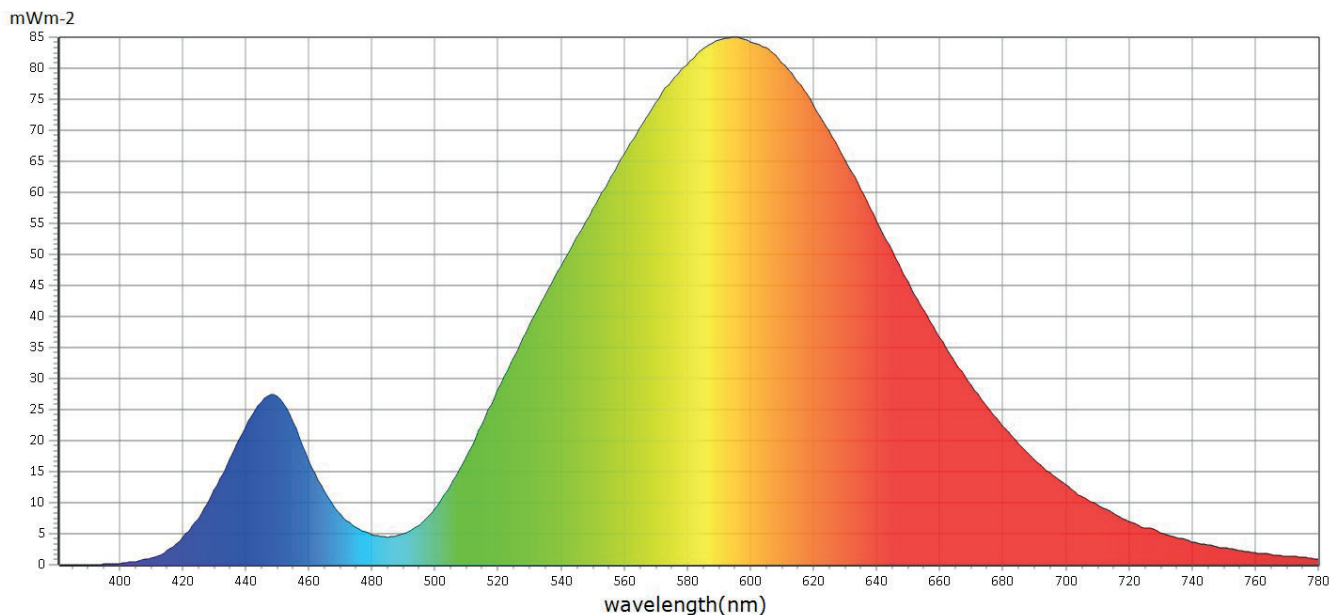

CIE1931

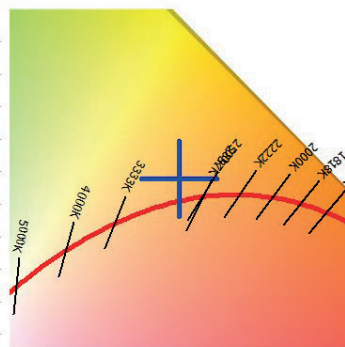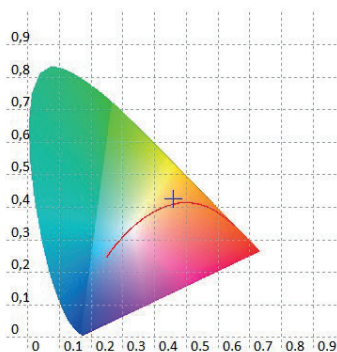

CIE1976

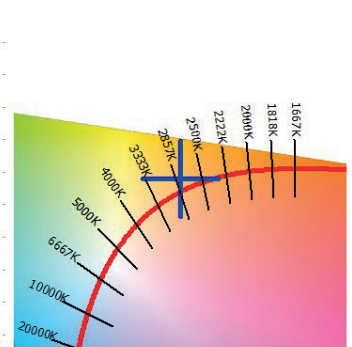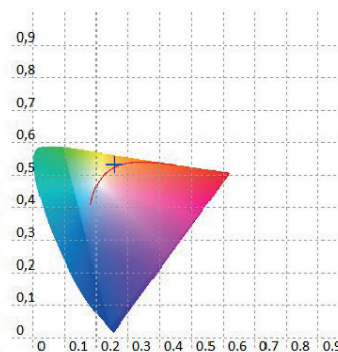

CTO @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User : Measure Time :15:54:07
Model NO. : MK350S PREMIUM Light Source :
Memo :
CTO


BASIC

CRI : 67,3
X : 0,4600
Y : 0,4254
CCT : 2810
LUX : 4146


CRI: 67,28

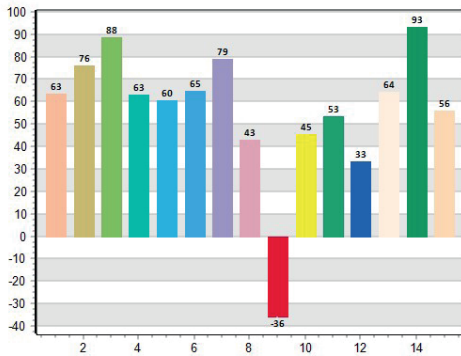


CQS: 69,41

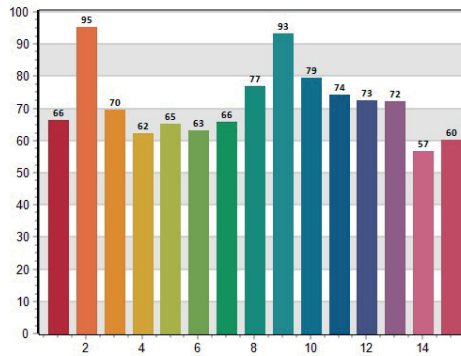


CRI-2

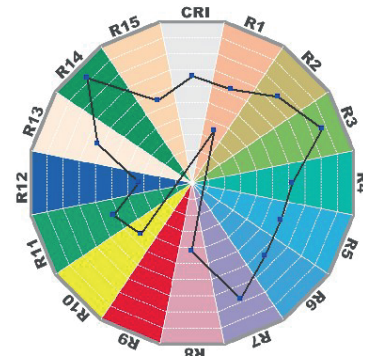

TM30: 71,66

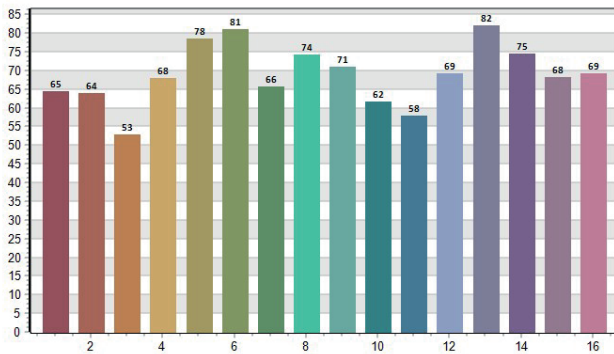

TLCI: 40,23

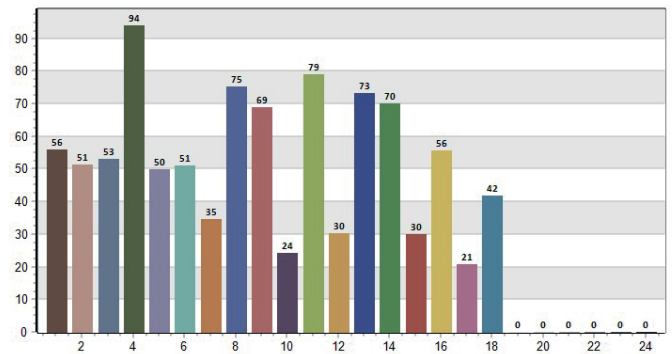

CRI values, only R1-R8 are used to calculate final CRI

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
63,5	76,2	88,5	63,1	60,5	64,7	78,9	42,9	-35,8	45,5	53,4	33,4	64,3	93,2	56,1

TM30 C values, 16 binned values out of total of 99 C values

C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	C14	C15	C16
64,5	63,8	52,9	67,9	78,5	80,9	65,6	74,2	71,0	61,7	57,9	69,1	82,1	74,5	68,1	69,2

CQS Q values

Q1	Q2	Q3	Q4	Q5	Q6	Q7	Q8	Q9	Q10	Q11	Q12	Q13	Q14	Q15
66,3	95,3	69,5	62,2	65,2	63,1	65,7	77,0	93,3	79,5	74,2	72,6	72,1	56,7	60,2

CTO @100% + High CRI Filter Spectrum Test Report

Slot #6

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:59:29
Model NO. : MK350S PREMIUM	Light Source :
Memo : C6 CTO	



BASIC

CRI	: 79,2
x	: 0,4788
y	: 0,4053
CCT	: 2416
LUX	: 3068



Spectrum

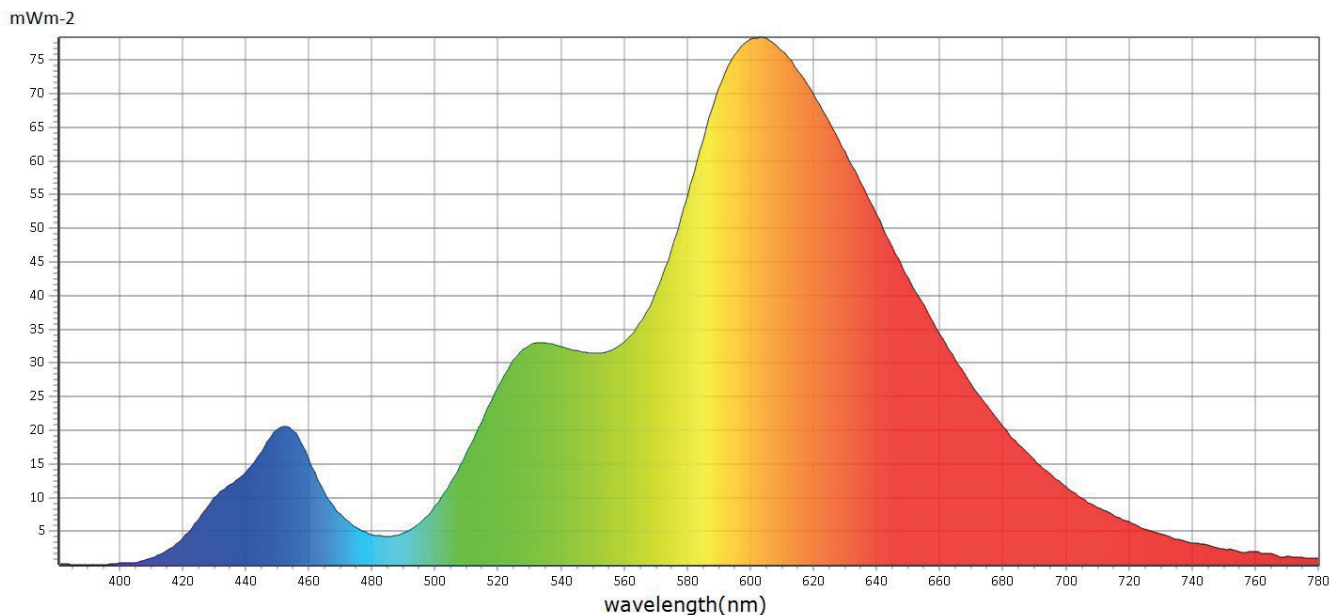

CIE1931

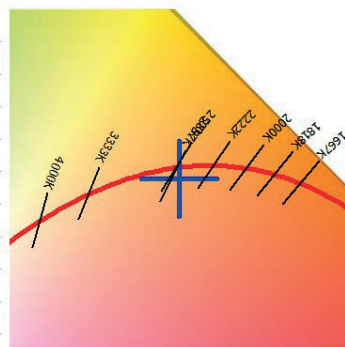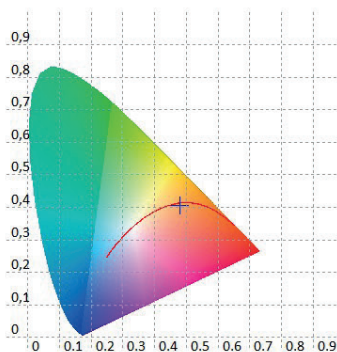

CIE1976

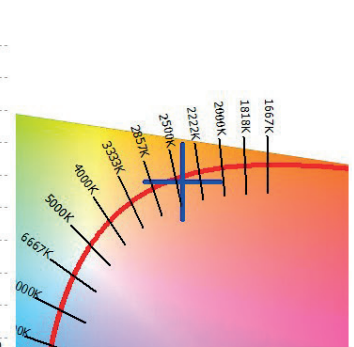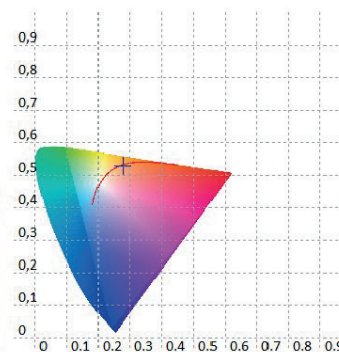

CTO @100% + High CRI Filter Spectrum Test Report

Slot #6

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User : Measure Time :15:59:29
Model NO. : MK350S PREMIUM Light Source :
Memo :
C6 CTO


BASIC

CRI : 79,2
X : 0,4788
Y : 0,4053
CCT : 2416
LUX : 3068


CRI: 79,19

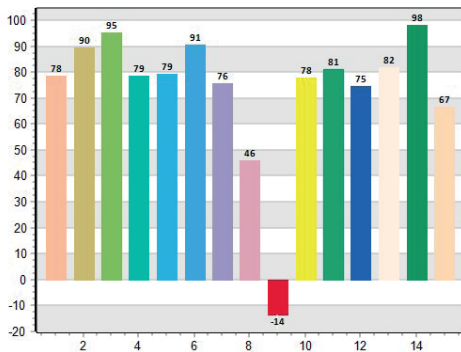


CQS: 75,04

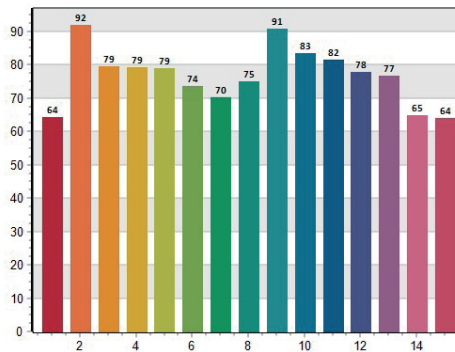


CRI-2

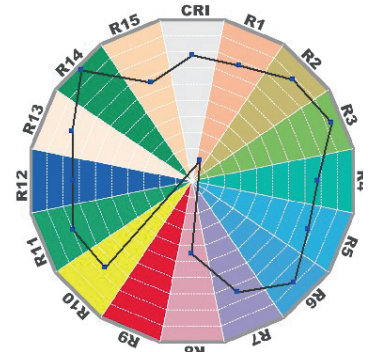

TM30: 77,80

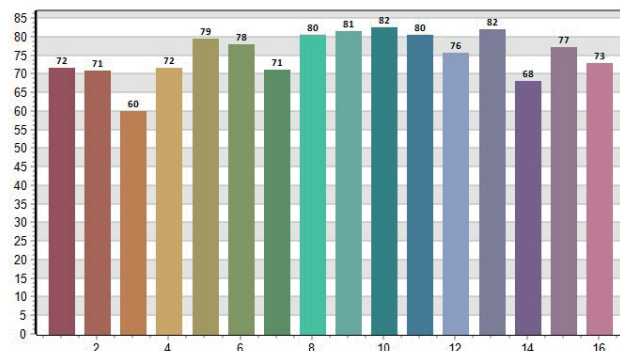

TLCI: 44,63

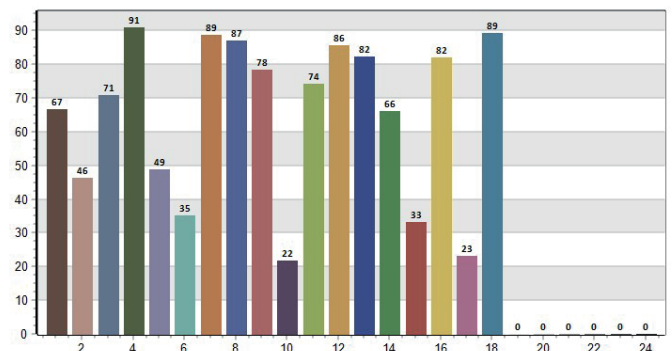

CRI values, only R1-R8 are used to calculate final CRI

R1	R2	R3	R4	R5	R6	R7	R8	R9	R10	R11	R12	R13	R14	R15
78,5	89,7	95,2	78,7	79,3	90,6	75,6	46,0	-13,6	77,8	81,2	74,7	81,8	98,2	66,7

TM30 C values, 16 binned values out of total of 99 C values

C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12	C13	C14	C15	C16
71,7	70,7	59,9	71,6	79,4	77,8	71,1	80,4	81,4	82,5	80,5	75,6	81,9	68,1	77,2	72,9

CQS Q values

Q1	Q2	Q3	Q4	Q5	Q6	Q7	Q8	Q9	Q10	Q11	Q12	Q13	Q14	Q15
64,4	91,9	79,5	79,2	78,9	73,6	70,2	75,0	90,8	83,4	81,5	77,7	76,7	64,8	64,1

Cyan @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:48:23
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Cyan	


BASIC

CRI	: 0,0
x	: 0,1536
y	: 0,1949
CCT	: 0
LUX	: 4652




Spectrum

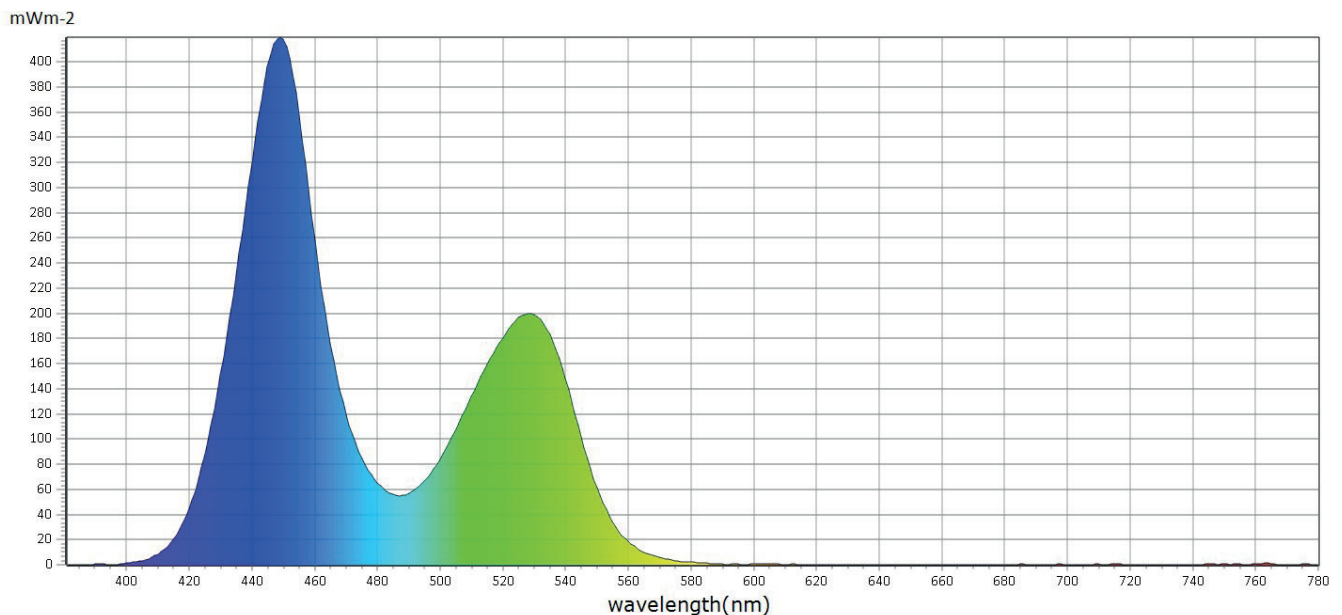

CIE1931

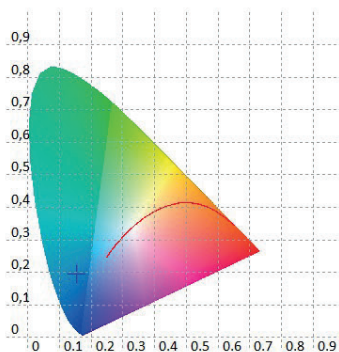

CIE1976

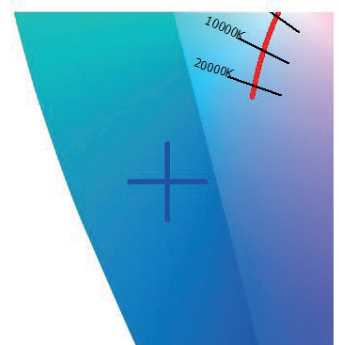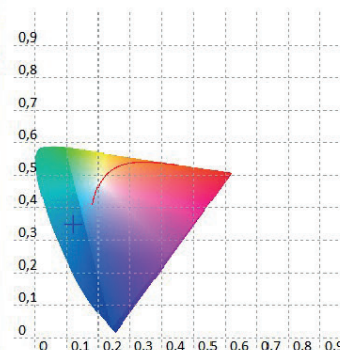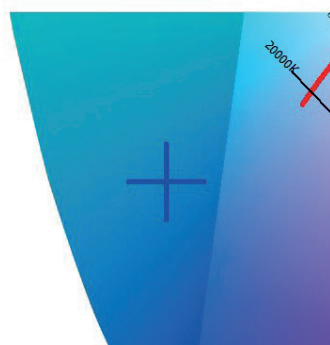

Magenta @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:50:08
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Magenta	


BASIC

CRI	: 0,0
x	: 0,2105
y	: 0,0424
CCT	: 0
LUX	: 678,5


Spectrum

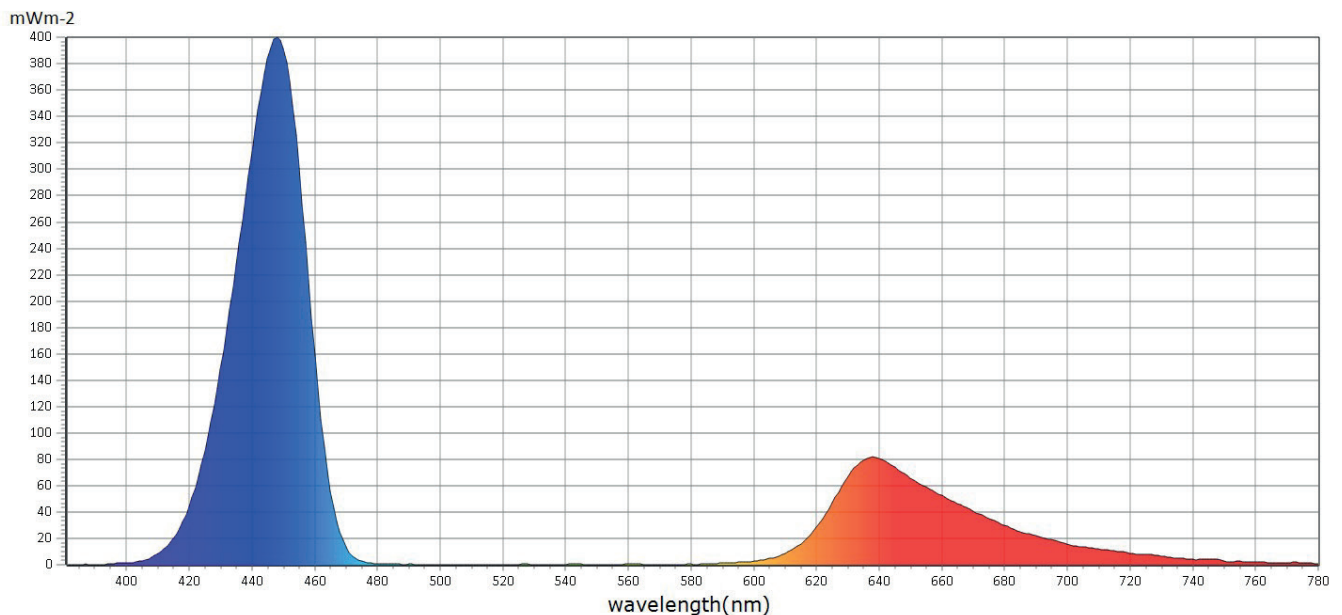

CIE1931

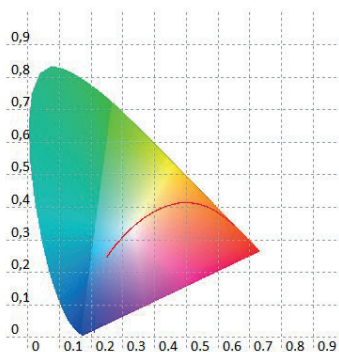

CIE1976

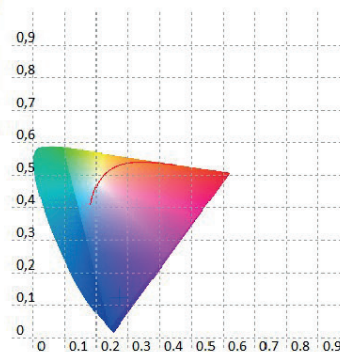

Yellow @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:50:29
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Yellow	


BASIC

CRI	: 27,4
x	: 0,4590
y	: 0,5326
CCT	: 3488
LUX	: 12327


Spectrum

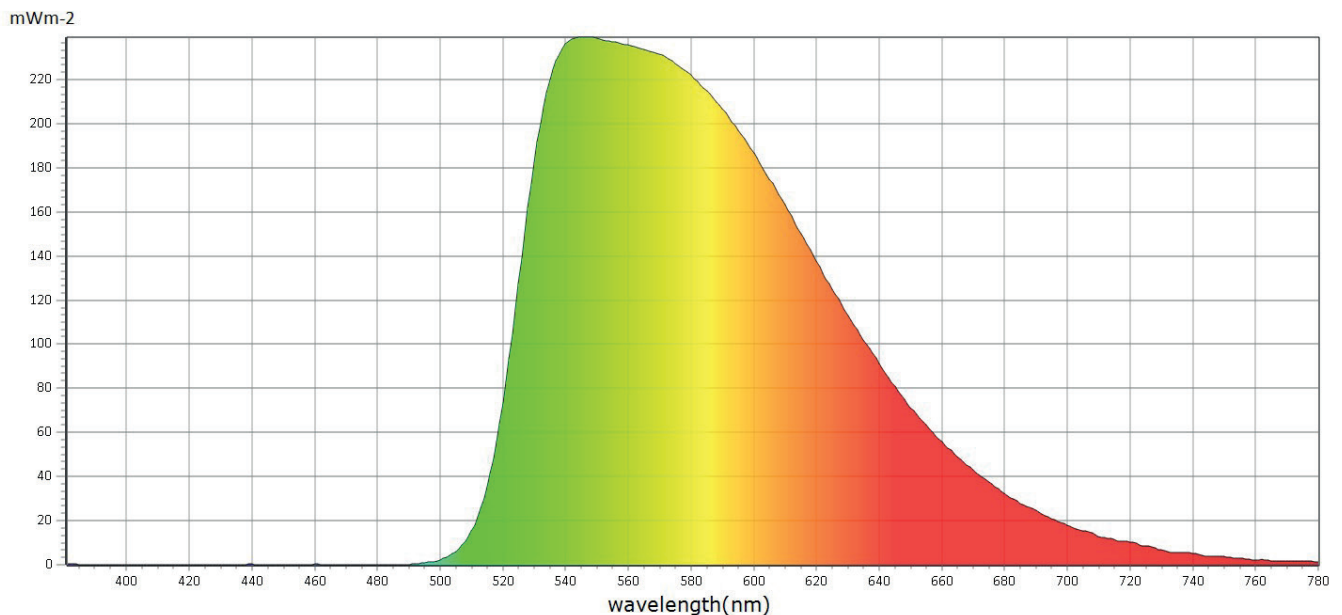

CIE1931

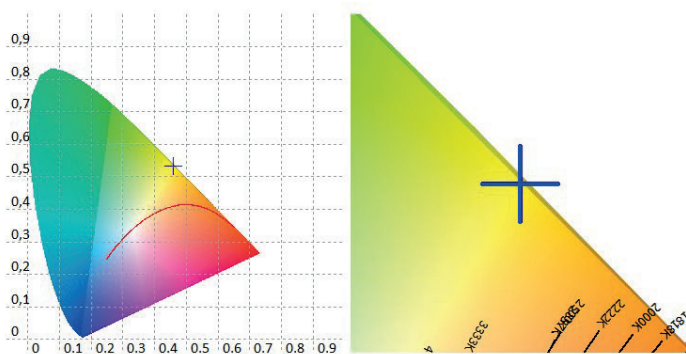

CIE1976

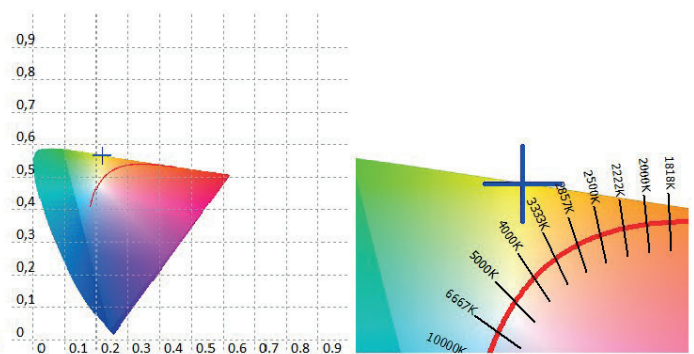

Cyan+Magenta @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:51:40
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Cyan Magenta	


BASIC

CRI	: 0,0
x	: 0,1593
y	: 0,0164
CCT	: 0
LUX	: 206,1


Spectrum

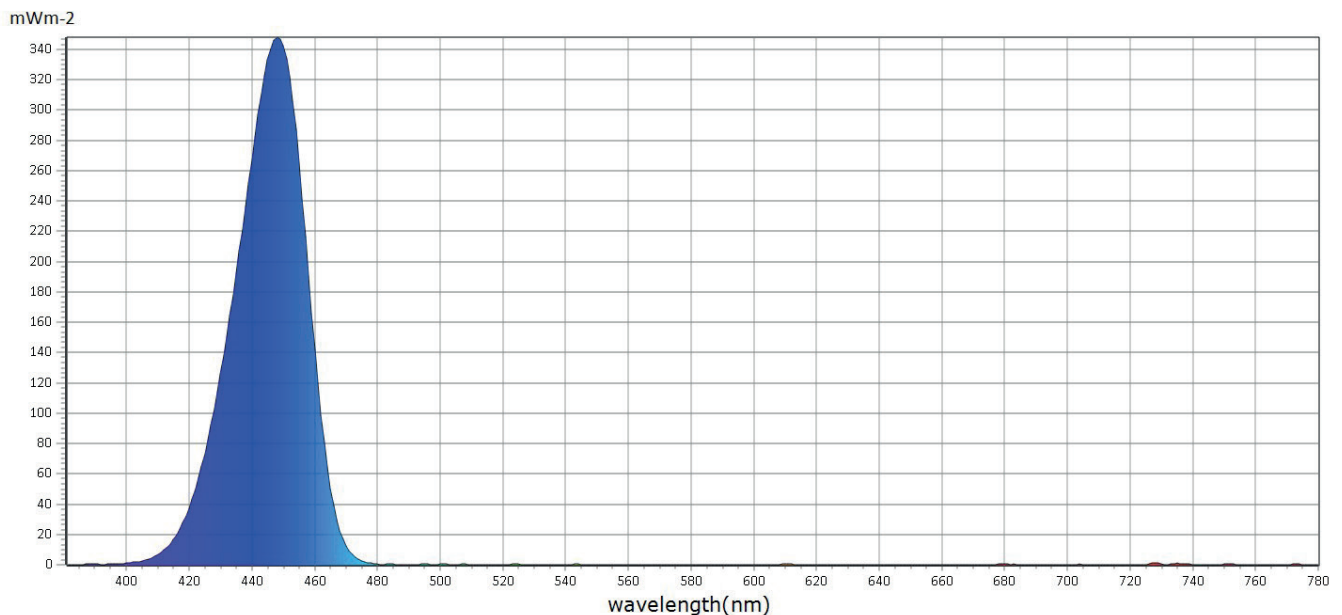

CIE1931

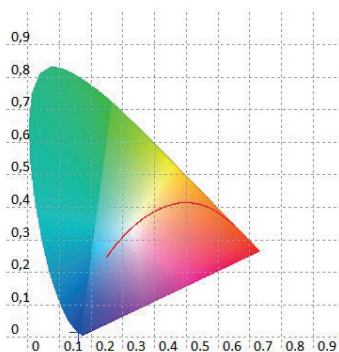

CIE1976

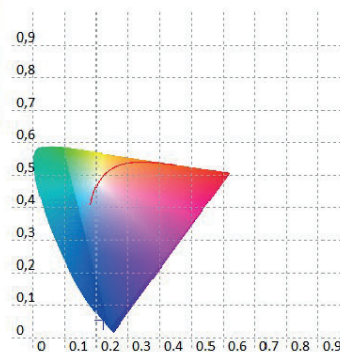

Magenta+Yellow @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:52:28
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Magenta Yellow	


BASIC

CRI	: 0,0
x	: 0,7016
y	: 0,2962
CCT	: 0
LUX	: 415,3


Spectrum

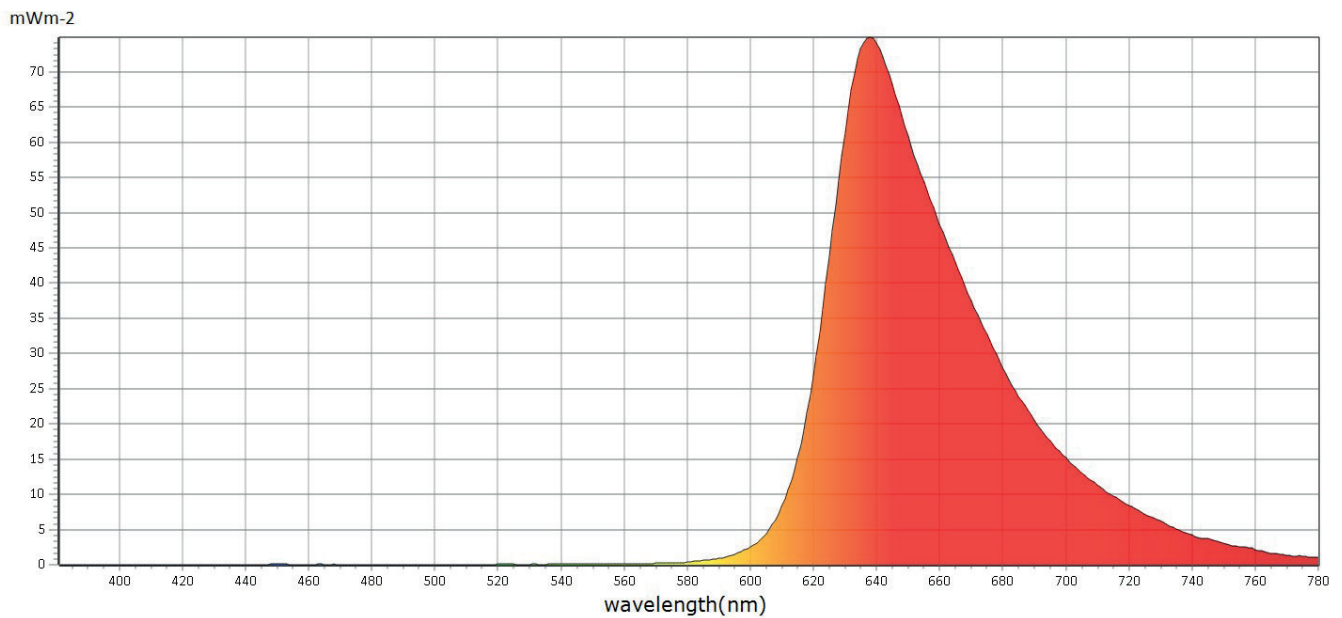

CIE1931

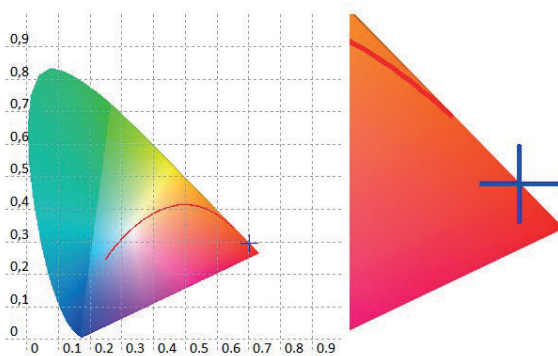

CIE1976

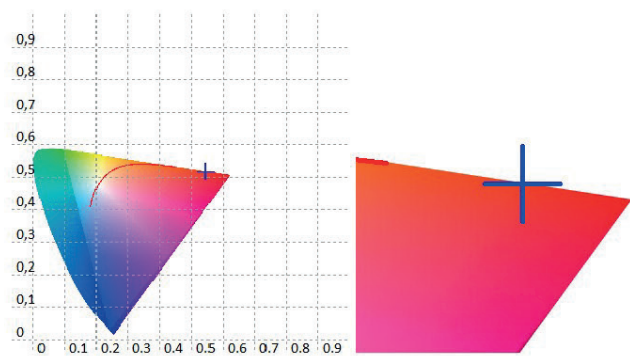

Cyan+Yellow @100% Spectrum Test Report

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:53:15
Model NO. : MK350S PREMIUM	Light Source :
Memo :	
Cyan Yellow	


BASIC

CRI	: 0,0
x	: 0,2073
y	: 0,7551
CCT	: 7131
LUX	: 2745


Spectrum

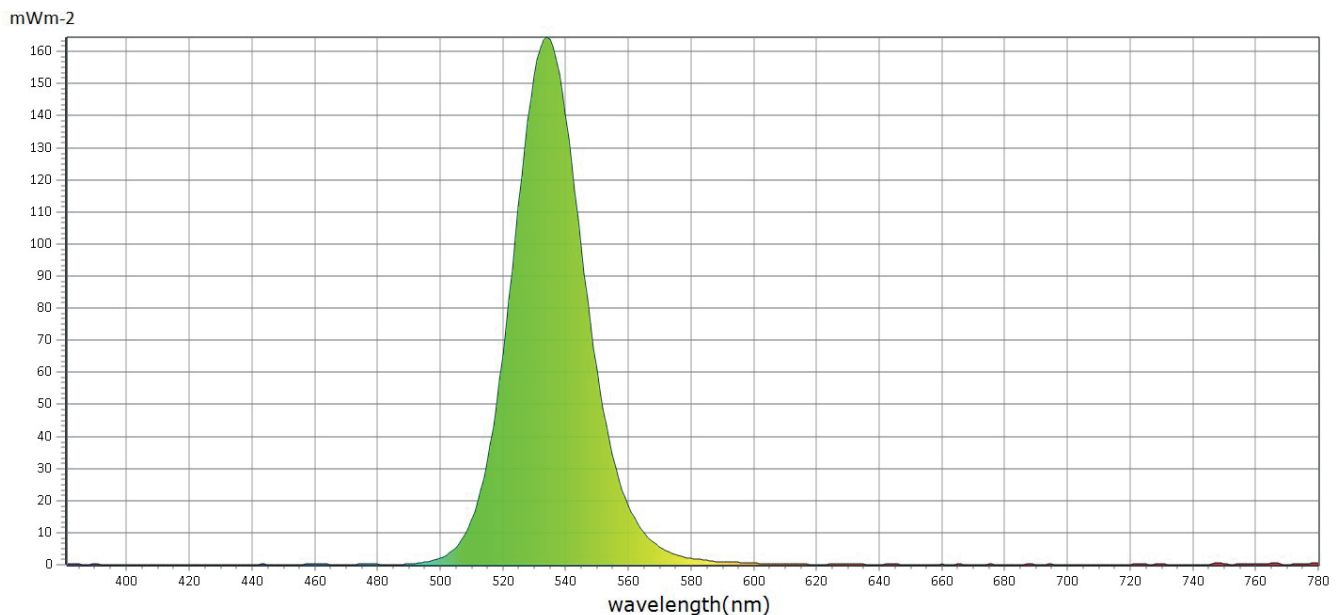

CIE1931

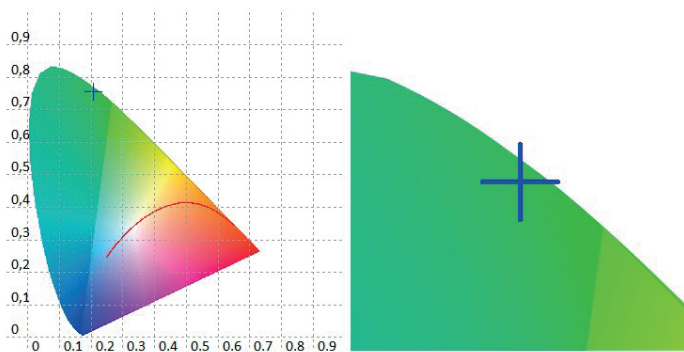

CIE1976

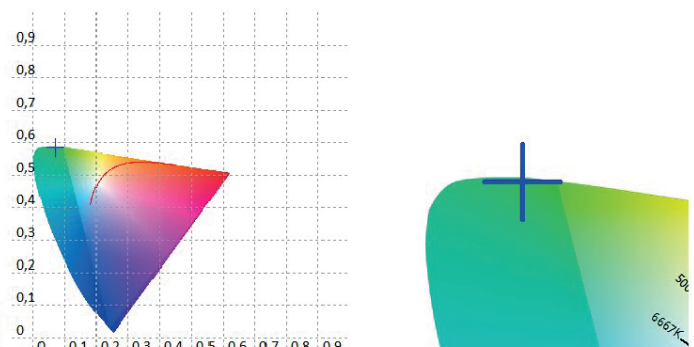

Plasa Red (Lee #029) Filter Spectrum Test Report

Slot #1

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:55:00
Model NO. : MK350S PREMIUM	Light Source :
Memo : C1	


BASIC

CRI	: 0,0
x	: 0,6981
y	: 0,2951
CCT	: 0
LUX	: 572,5


Spectrum

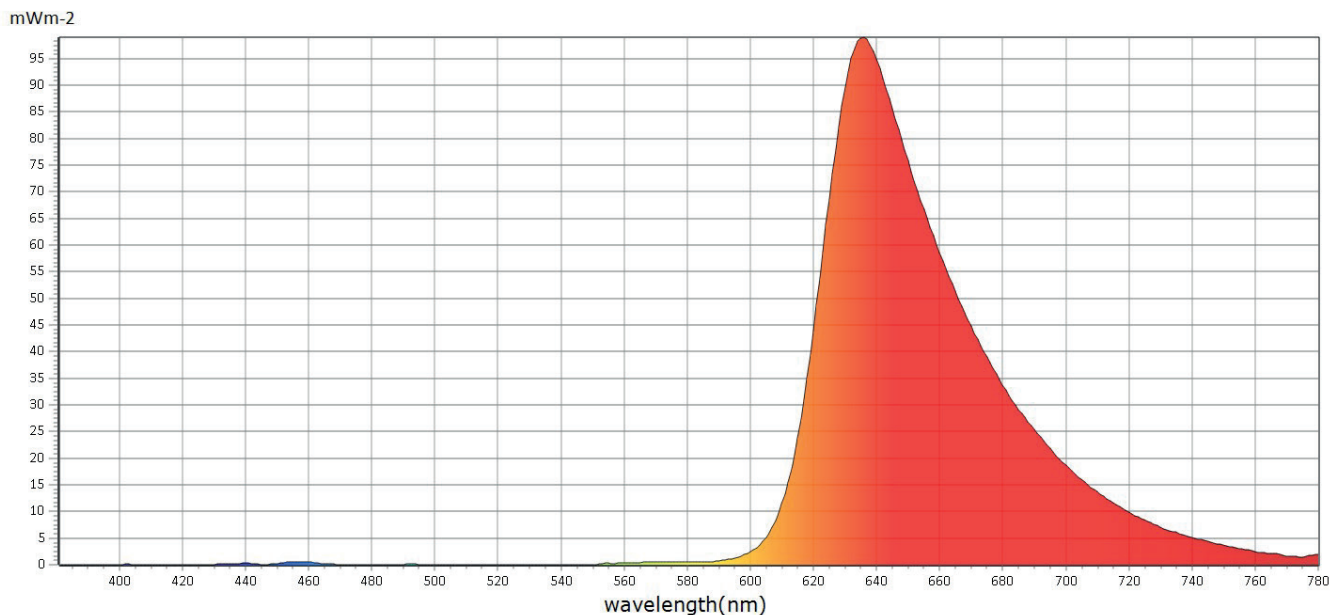

CIE1931

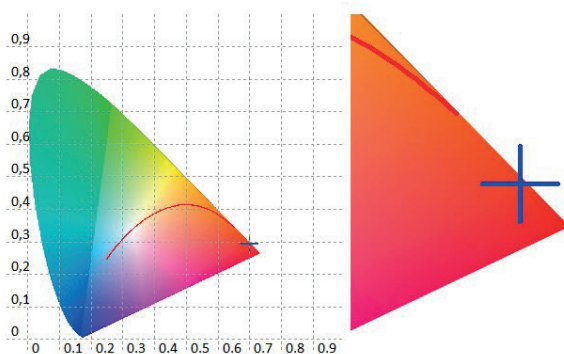

CIE1976

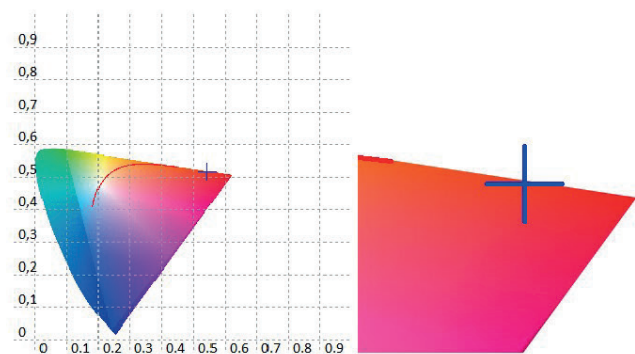

Tokyo Blue (Lee #071) Filter Spectrum Test Report

Slot #2

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:55:55
Model NO. : MK350S PREMIUM	Light Source :
Memo : C2	


BASIC

CRI	: 0,0
x	: 0,1540
y	: 0,0372
CCT	: 0
LUX	: 749,6


Spectrum

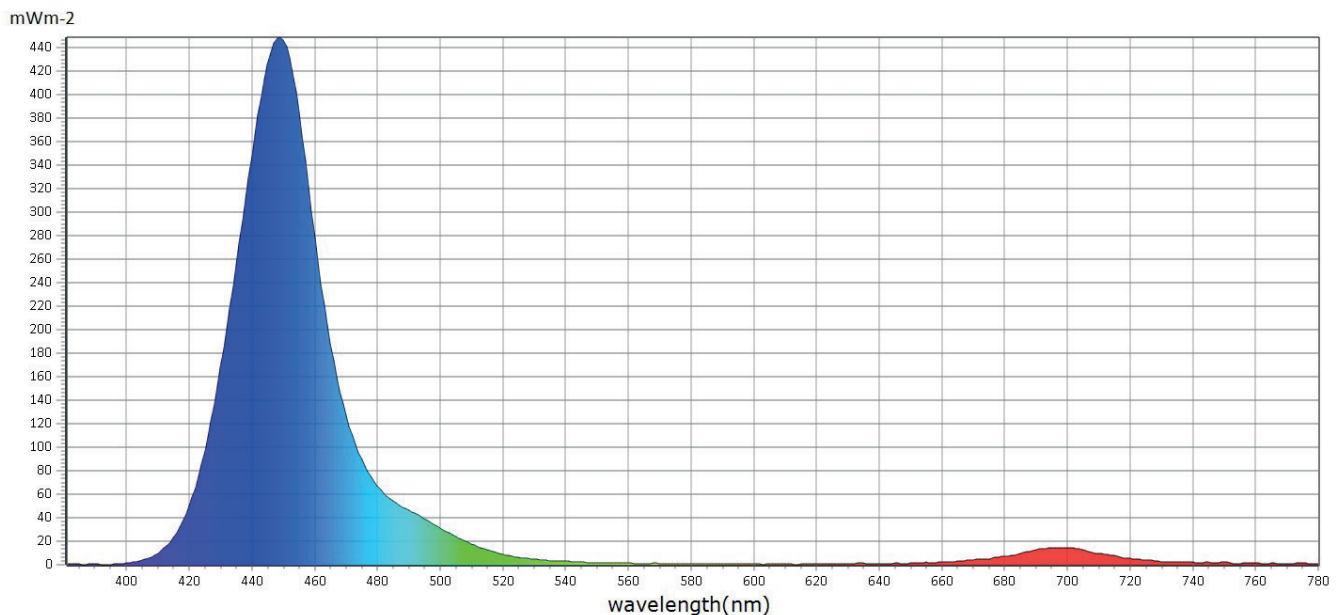

CIE1931

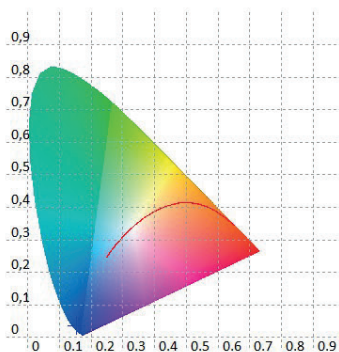

CIE1976

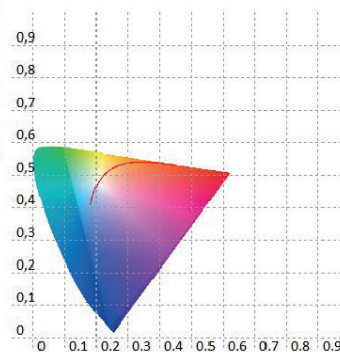

Twickenham Green (Lee #736) Filter Spectrum Test Report

Slot #3

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:56:05
Model NO. : MK350S PREMIUM	Light Source :
Memo : C3	


BASIC

CRI	: 0,0
x	: 0,1700
y	: 0,7570
CCT	: 7671
LUX	: 4209


Spectrum

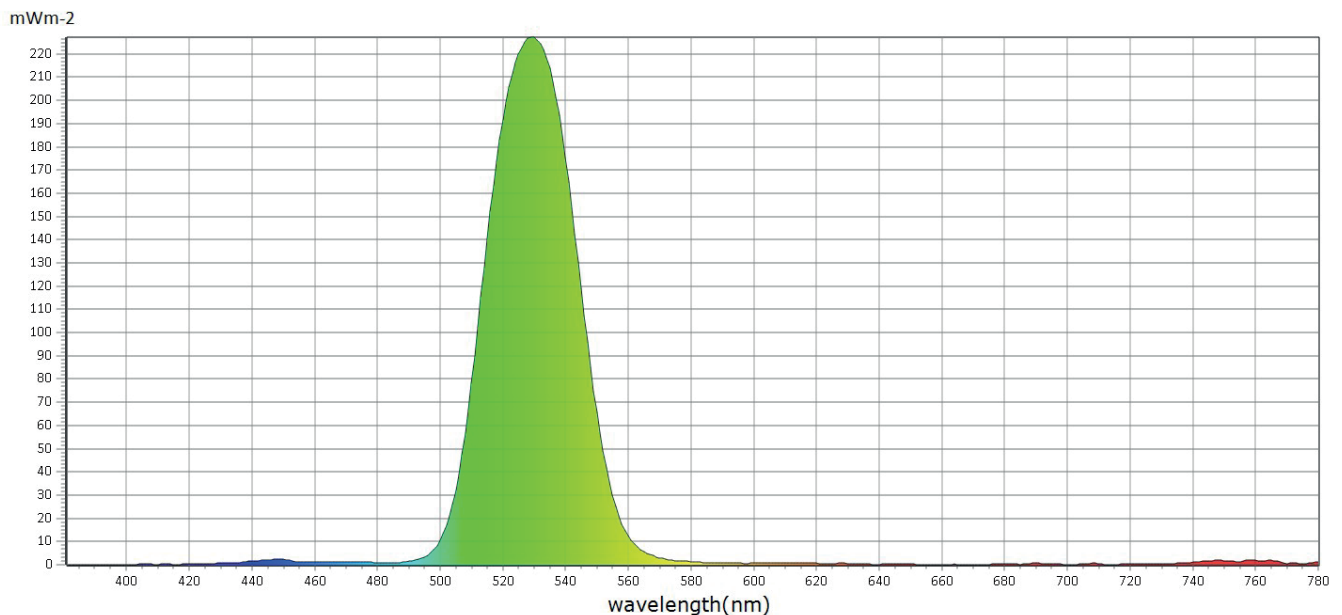

CIE1931

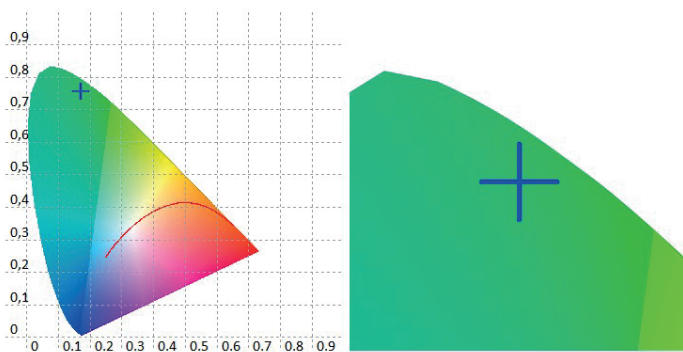

CIE1976

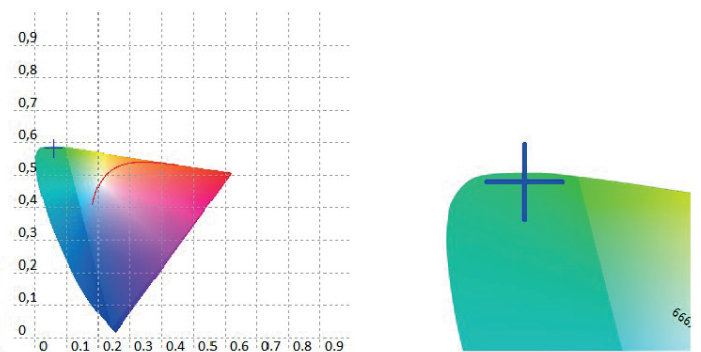

Deep Amber (Lee #104) Filter Spectrum Test Report

Slot #4

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:56:21
Model NO. : MK350S PREMIUM	Light Source :
Memo : C4	


BASIC

CRI	: 23,1
x	: 0,5592
y	: 0,4342
CCT	: 1875
LUX	: 7034


Spectrum

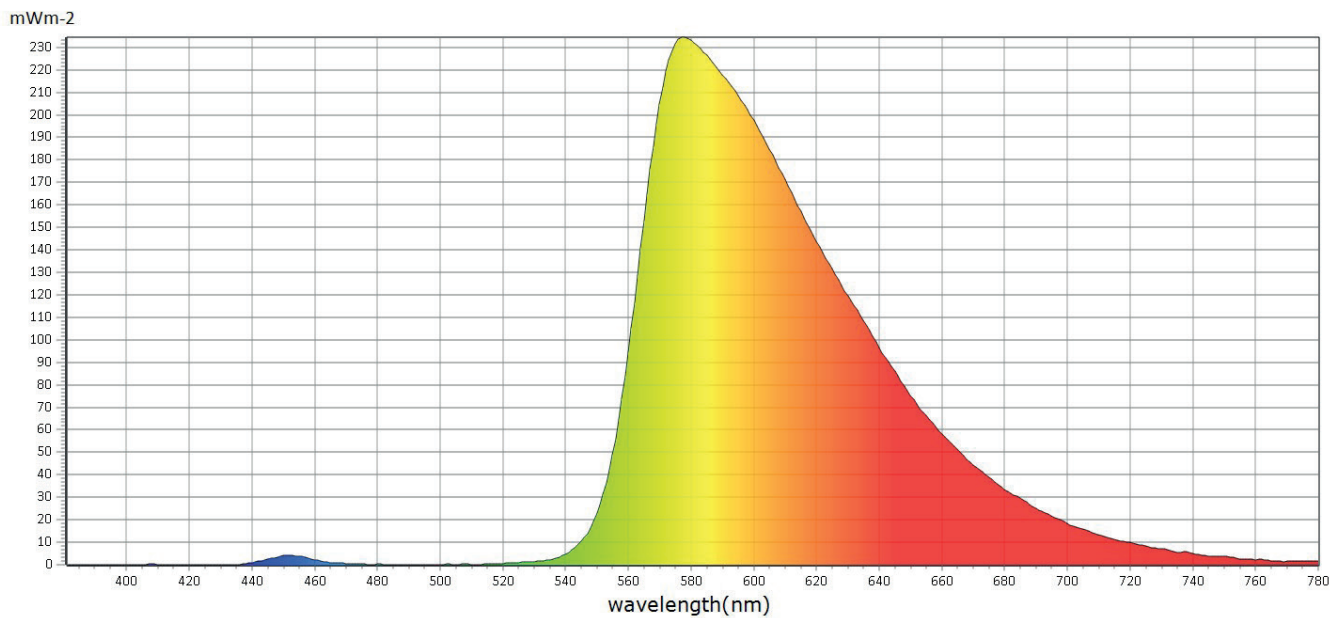

CIE1931

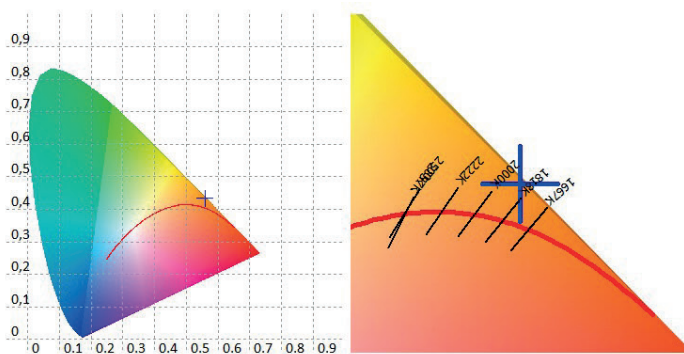

CIE1976

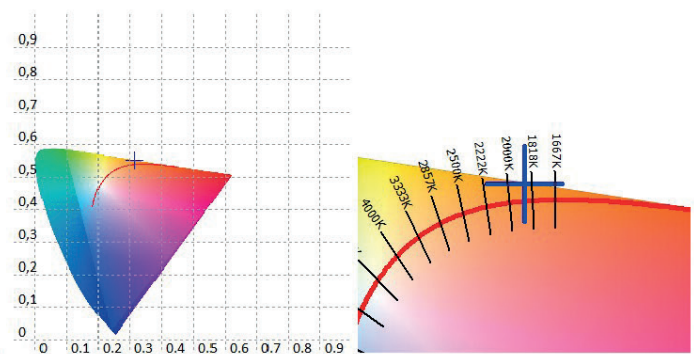

AS Golden Amber (Lee #780) Filter Spectrum Test Report

Slot #5

Medium Zoom @ 5m

UPRtek
United Power Research Technology Corporation


Information

User :	Measure Time :15:57:36
Model NO. : MK350S PREMIUM	Light Source :
Memo : C5	


BASIC

CRI	: 0,0
x	: 0,6664
y	: 0,3324
CCT	: 0
LUX	: 1821


Spectrum

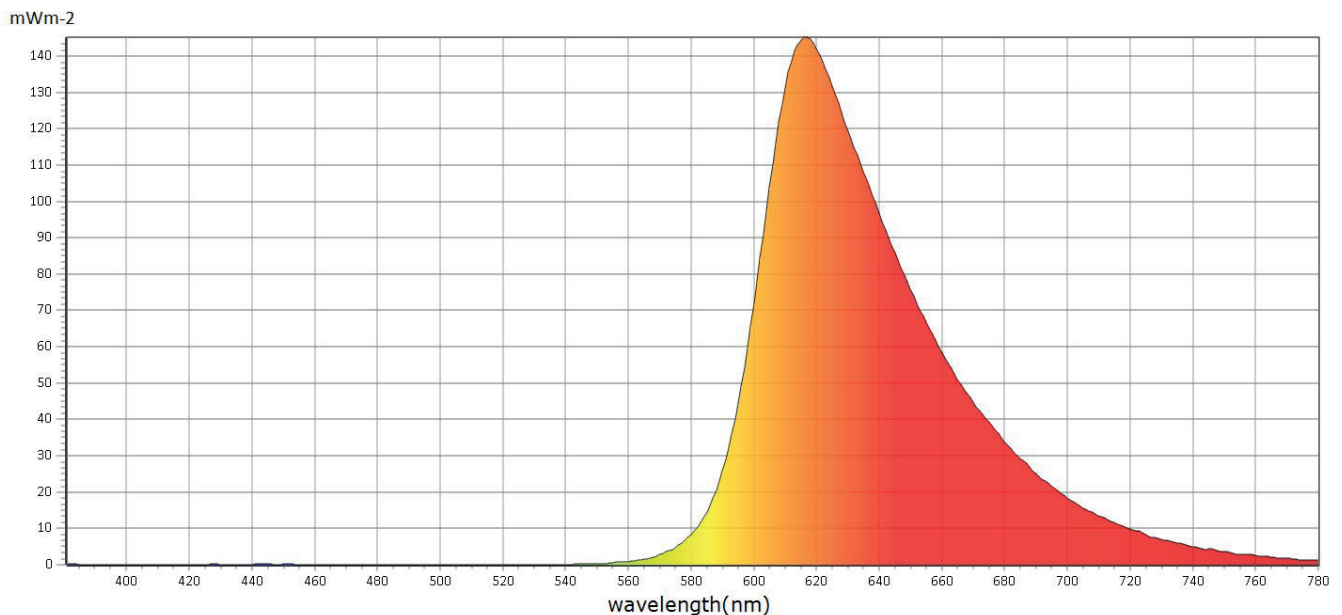

CIE1931

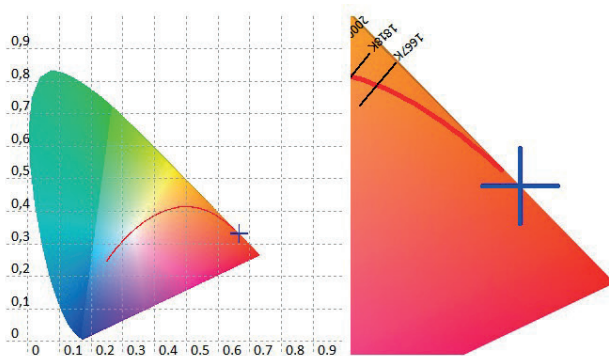

CIE1976

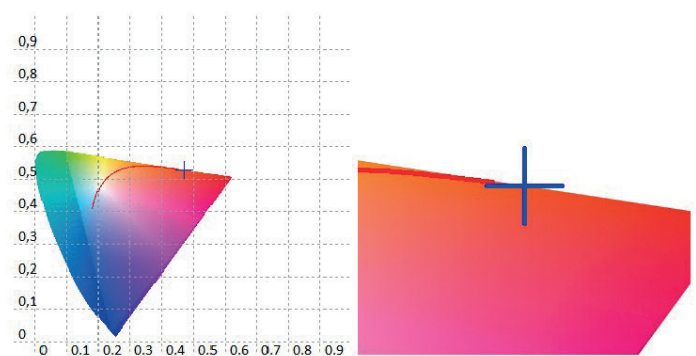

Starway

22 Rue Édouard Buffard
77144 Montevrain
France

starway.eu
